

# INSTALLATION INSTRUCTION

## Miniature Low Voltage Recessed Fixtures

HR-1138

**WAC LIGHTING**  
Responsible Lighting®


### SAFETY INSTRUCTION

To reduce the risk of fire, electrical shock and injuries to persons :

- Use only insulated staples or plastic ties to secure cords.
- Route and secure cords so they will not be pinched or damaged when cabinet is pushed to the wall.
- Position cabinet light so that lamping instructions are visible.
- Not intended for recessed installation in ceilings.

1. Cut a 2 1/8" diameter hole on the surface.
2. Thread the 12V output wires from the transformer through the opening in the cabinet and connect it to the wires from the fixture with the wire nuts provided.
3. Compress the springs on either side of the fixture and insert into the opening.
4. Unscrew and remove glass from fixture.
5. Insert light bulb into socket.
6. Replace glass cover.

Note : This fixture is designed for use with a JC Bi-Pin lamp 12V 20W or less

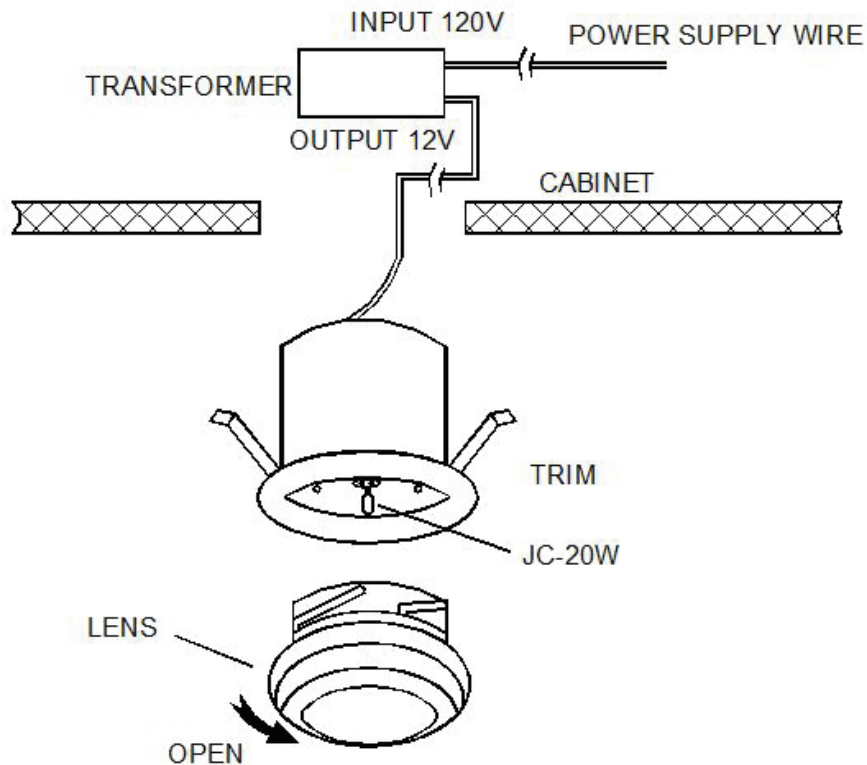

**WAC Lighting**  
www.waclighting.com  
Phone (800) 526.2588 • Fax (800) 526.2585

**Headquarters/Eastern Distribution Center**  
44 Harbor Park Drive • Port Washington, NY 11050  
Phone (516) 515.5000 • Fax (516) 515.5050

**Western Distribution Center**  
1750 Archibald Ave • Ontario, CA 91761  
Phone (800) 526.2588 • Fax (800) 526.2585